Advantages:

- Robust design with steel lifting unit
- High degree of protection and performance
- Self-locking trapezoidal screw

Typical areas of application:

- Industrial and construction engineering
- Vehicle and boat construction
- Forestry and agricultural technology
- Antenna and solar technology

Key figures:

- DC motor with 12 VD C or 24 V DC
- Up to 3500 N (dynamic)
- Up to 33.5 mm/sec
- 4500 N (static)
- Protection class IP54
- Ambient temperature -25 °C to +65 °C
- Duty cycle 25 %
- Overload clutch

Options:

- Potentiometer
- Adjustable limit switches
- Protection class IP65
- Manual emergency operation


Mounting by clamps




Drive data:

	Ratio	Max.	Max.	Speed,		Possible	12 \	/ DC	24 V DC		
		compression force dynamic	pulling force dynamic	no load	full load	stroke lengths	Max. current no load	Max. current full load	Max. current no load	Max. current full load	
		[N]	[N]	[mm/s]	[mm/s]	[mm]	[A]	[A]	[A]	[A]	
	10:1	1500	1500	33.5	26.7	102-610	3.5	17	1.7	8.5	
_	20:1	2500	2500	17	14.3	102-610	3.5	13	1.7	6.5	
	40:1	3500	3500	8.4	7.4	102-610	3.5	11.5	1.7	5.7	

Load diagrams:

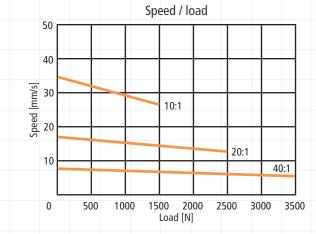


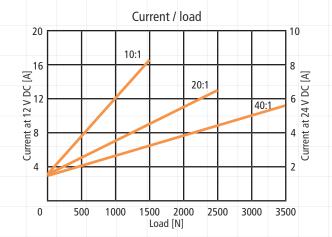

Type code:


VID	010	-	24	-	20	-	Α.	١	-	100		-	ES.MH	
Тур	oe		Voltage		Ratio		Trapezoio	lal screw		Stroke length	h		Options	
			12 - 12 V DC 24 - 24 V DC		10 - 10:1 20 - 20:1					100 - 102 mm 150 - 153 mm	n		ES - Limit switches, adjustab POT - Potentiometer	
					40 - 40:1					200 - 203 mm 250 - 254 mm 300 - 305 mm 450 - 457 mm	n n n		MH - Manual emergency ope I - Protection class IP65 C1, C2, C3, C4, C5 - Position housing bore	
										600 - 610 mm	n			

Dimensions (standard):

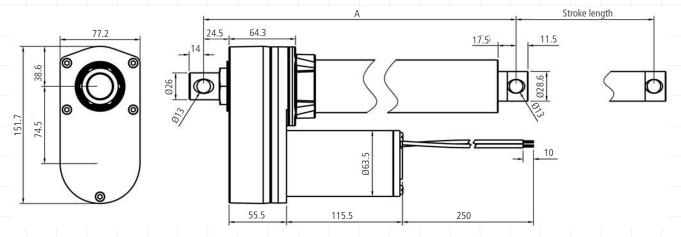

Stroke length (+/- 2.5 mm)	102 mm	153 mm	203 mm	254 mm	305 mm	457 mm	610 mm
Installation length A (+/- 3.8 mm)	262 mm	313 mm	364 mm	414 mm	465 mm	668 mm	821 mm

Dimensions (with limit switches and/or potentiometer):

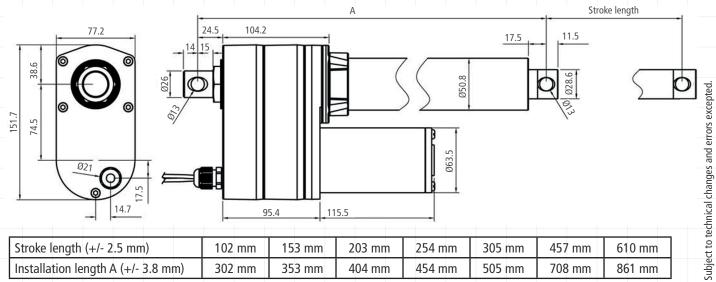


Stroke length (+/- 2.5 mm)	102 mm	153 mm	203 mm	254 mm	305 mm	457 mm	610 mm
Installation length A (+/- 3.8 mm)	302 mm	353 mm	404 mm	454 mm	505 mm	708 mm	861 mm




The extended end position is set via the upper cam disk, the retracted end position via the lower cam disk. If necessary, the end positions can be adjusted according to the following points.

To prevent damage to the plastic gear unit, the cam disks must be held in place while loosening or tightening the cam screw.

- 1. If the electric cylinder is attached, loosen the connections. Open the gearbox cover by loosening the 5 hexagon socket screws.
- 2. Make sure that the lifting tube does not rotate during motorized adjustment. Retract the electric cylinder electrically until the lower cam disk triggers the limit switch and the motor switches off. Turn the lifting rod manually to the desired retracted position.
- 3. Make sure that the lifting tube does not rotate during motorized adjustment. Extend the cylinder electrically until the desired position is reached. Adjust the upper cam disk until it triggers the limit switch.

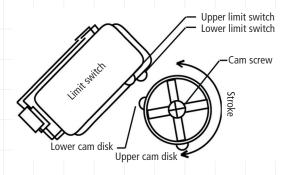


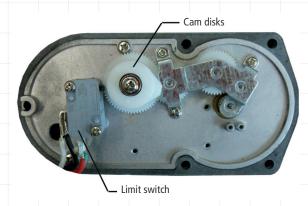

Potentiometer:

The resistance of the tapping of the potentiometer changes as a function of the stroke length and the actuating position of the electric cylinder according to the table below:

Resistance between b	lue and white conductor
Stroke [mm]	Resistance (kΩ)
100	0.3 - 8.0
150	0.3 - 8.5
200	0.3 - 9.1
300	0.3 - 8.6
450	0.3 - 9.2
600	0.3 - 9.8
Tolerance	e: ± 0.3 (kΩ)

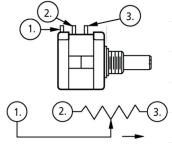


- 1. Blue conductor
- 2. Yellow conductor
- 3. White conductor

Attachment:


The lower fixing eye is fixed at an angle of 90° as standard.

It is possible to choose other angles (see left graphic) when ordering. Then add the corresponding designation C1 to C5 to the type code.

Furthermore, it is possible to order mounting clamps for pipe installation.

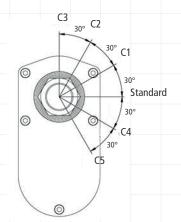


Attachment with mounting clamp:

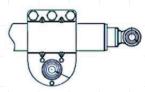

Installation note:

The piston rod extends or retracts according to the pin assignment. If limit switches are integrated in the cylinder, the motor stops automatically in the respective end position.

If no limit switches are integrated, it must be ensured that the motor is switched off before reaching the respective mechanical end position. The motor must be protected against overcurrent by a fuse.

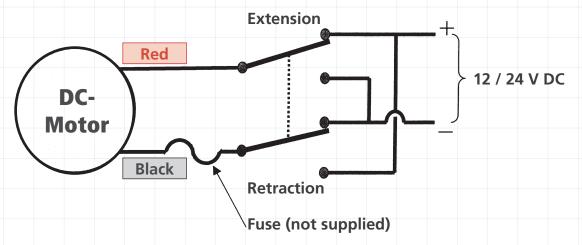

The load should always be centered in the direction of movement. Lateral forces should be avoided. They always shorten the service life and in extreme cases can interfere with the function or even destroy the device.

Ensure that the permissible load is not exceeded.

